
AMoN: Sampler Change-out (refer to SOP for complete instructions:

http://nadp.slh.wisc.edu/lib/manualsSOPs.aspx

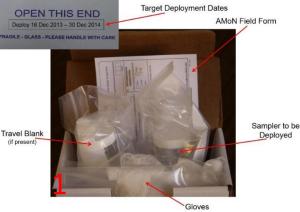

Inspect contents of AMoN supply box. Contact Site Liaison if jar(s) is/are cracked, or sampler(s) is/are broken.



Wearing a clean glove (supplied), collect the deployed sampler(s) from the AMoN shelter. Return sampler to its glass jar and seal.



Clean the shelter with DI water and a lab wipe or print-free paper towel.

3 samplers to deploy, OR 1 sampler to deploy

Travel Blank (leave in sealed jar, in shipping box)





citric acid coated filter paper

Note the number (1 or 3) of samplers to deploy. The Travel Blank bottle, if present, should not be opened or deployed.



Wearing a new, clean glove, deploy the new sampler(s).

AMMONIA MONITORING NETWORK (AMoN) NADP pleted Form with Each Sample S Y Central Analytical Laboratory Drive Madison WI 5371 1. SITE 2. OBSERVE Printname 3. SAMPLE START AND EN METEOROLOGICAL OBSERVATIONS lease check any and all conditions that app ment on any other site condit. heck if present during perio 1. Significant smoke or fire Frost Dew Fertilizer use nearby Snow Fog OFF Farm animal activity nearb Rain 6. SITE OBSERVATIONS DURING FILTER REMOVAL 7 REMARKS For example: equipment malfunction, contamination, farming, huming Have dropped Have fall color? Complete the field form. 6 ns? Call the CAL at 1-800-952-7353 or E-mail

White Copy: Retur

Nue Come Pathia And Your Pacant

Pack the sealed jar(s) and completed field form, and ship to the CAL for analysis.

NADP Sample Receipt Central Analytical Laboratory 2601 Agriculture Drive Madison, Wisconsin 53718 USA



Revised: 22 June 2018